


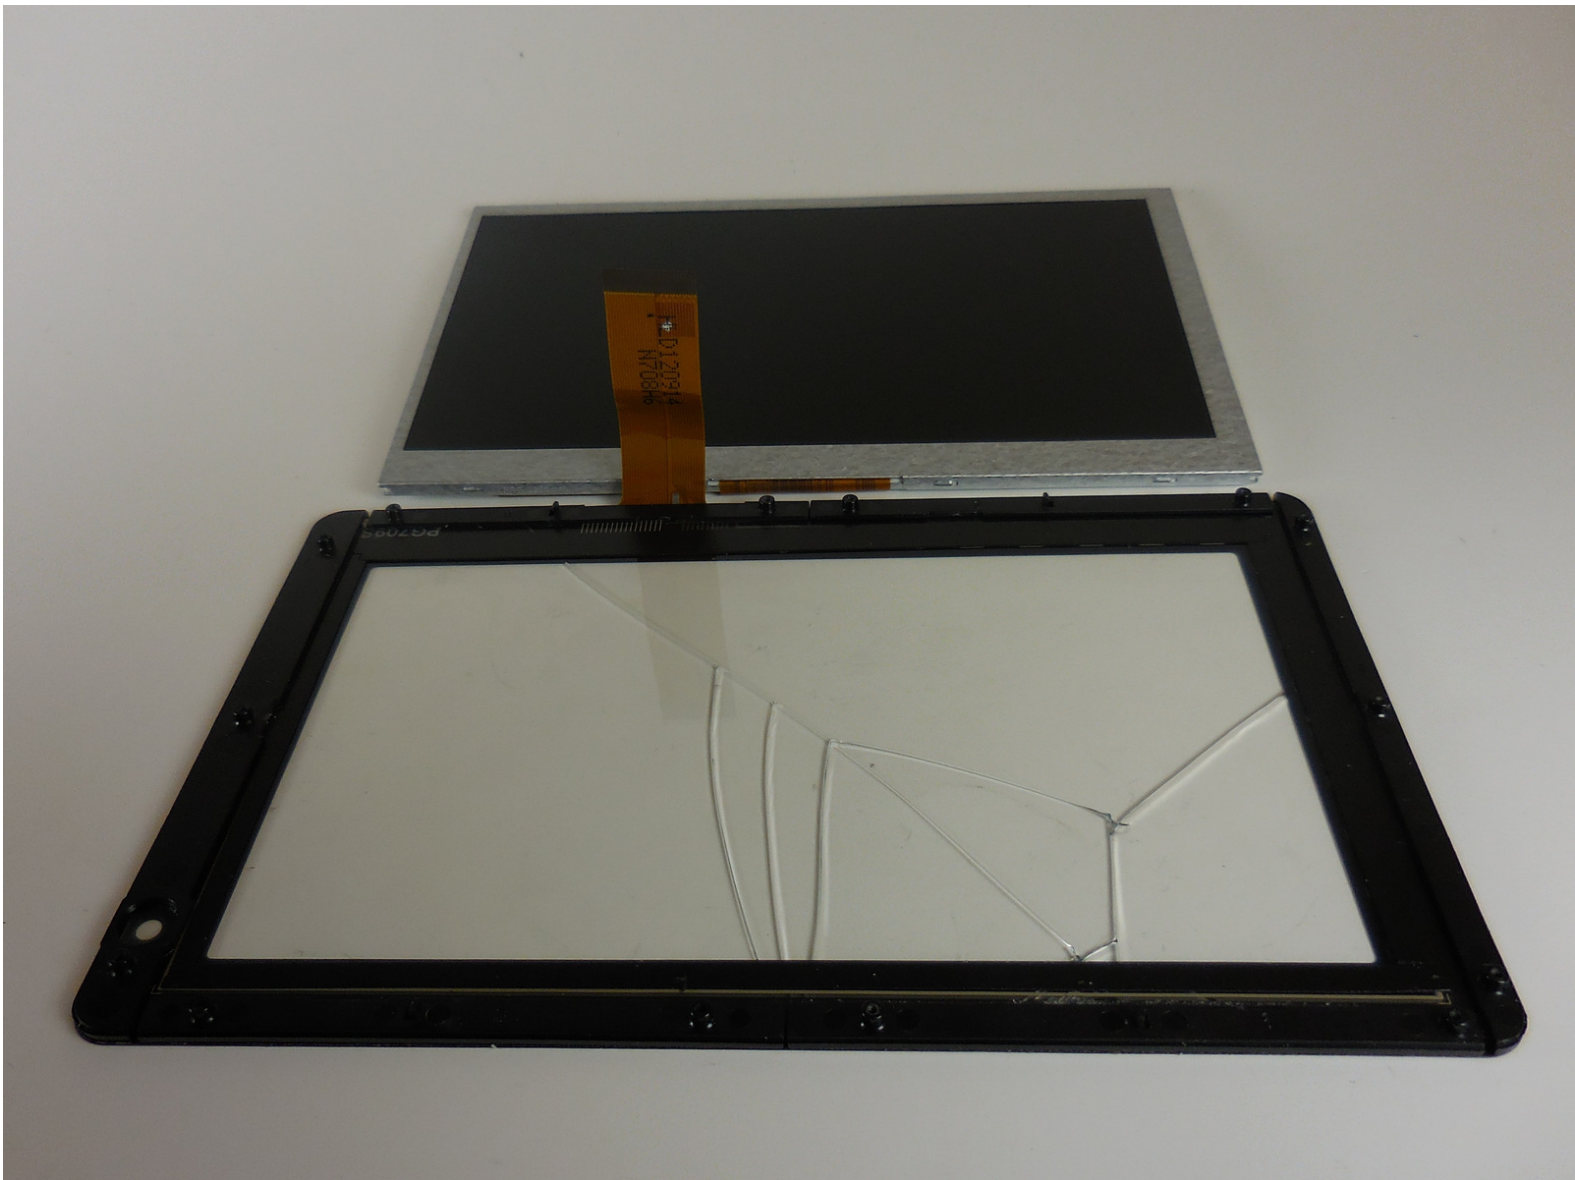

Onda V701 Screen Replacement

Remove the screen from the device.

Written By: William Sioholm



INTRODUCTION

This guide will allow you to remove the screen from the inside of the device in order to clean it or replace it. The screen on a device can easily crack. This repair is easy to do and does not require any special tools.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Back Panel



 Ensure device is powered off before disassembly.



- Remove the 4 rubber screw plugs using a spudger.

Step 2

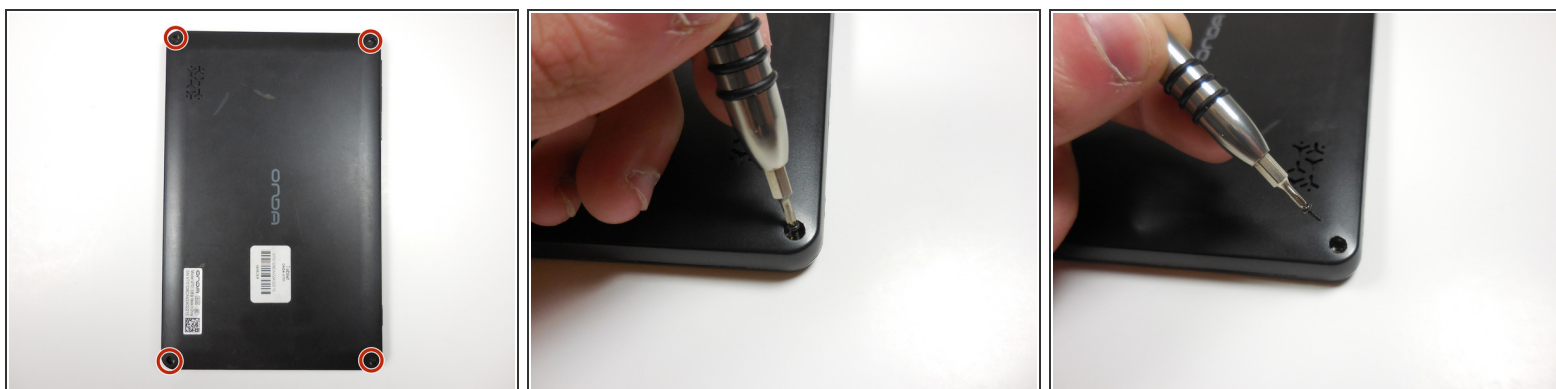

- Remove the four 4.8mm mounting screws using a PH00 screwdriver.

Step 3

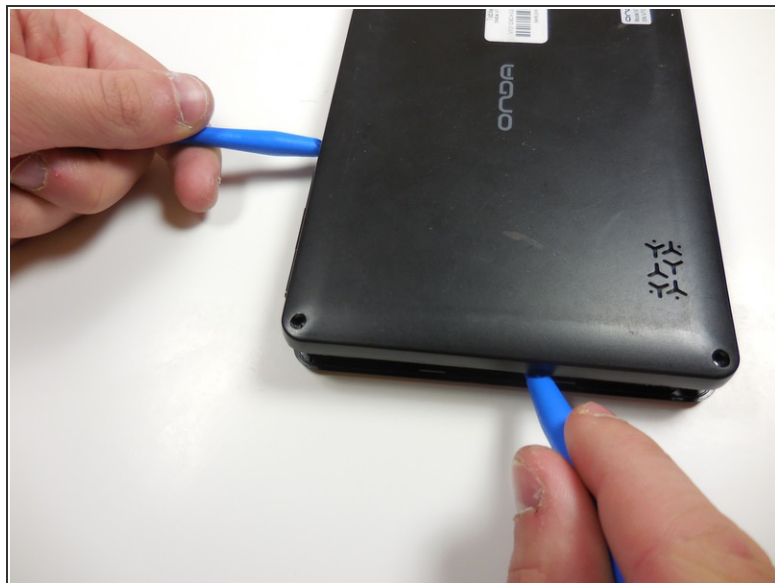
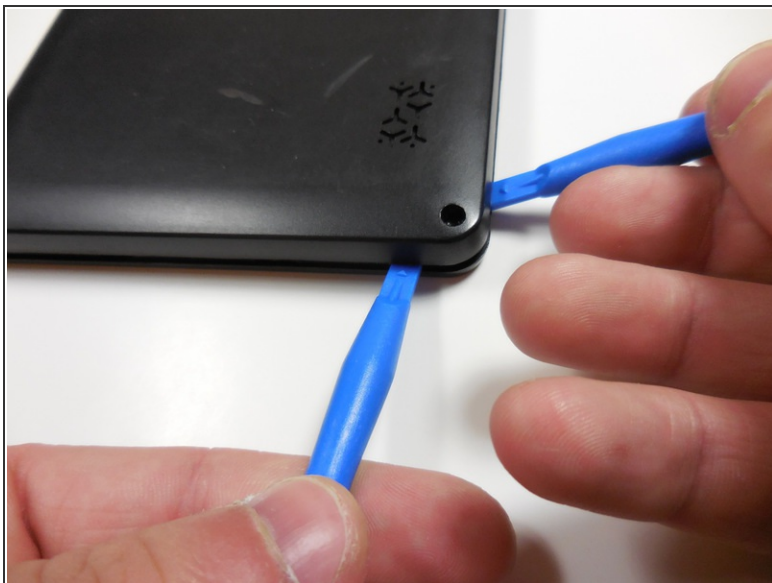


- Starting at one corner, gently pry the back panel assembly from the screen assembly using two plastic opening tools.
- Slide the opening tools around the perimeter of the device to separate the back panel assembly from the screen assembly.



- Gently lift the screen assembly away from the back cover assembly.
- ⓘ Be careful when separating the two pieces as the screen assembly is still connected to the motherboard by two ribbon cables.

This image shows the internal components of a laptop, specifically the motherboard and the optical drive. The motherboard is green and populated with various components, including a large black heat sink, several integrated circuits, and capacitors. Two RAM modules are visible, each highlighted with a red rectangular box. The optical drive is a gold-colored unit with a black disc cover, located on the right side of the image. The drive is labeled 'DVD RW' and 'DVD-RW'. The overall image is a close-up, showing the intricate details of the laptop's internal hardware.

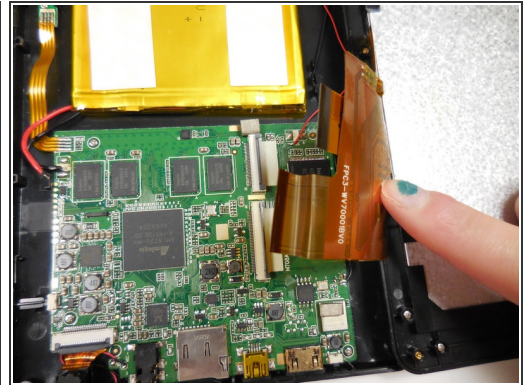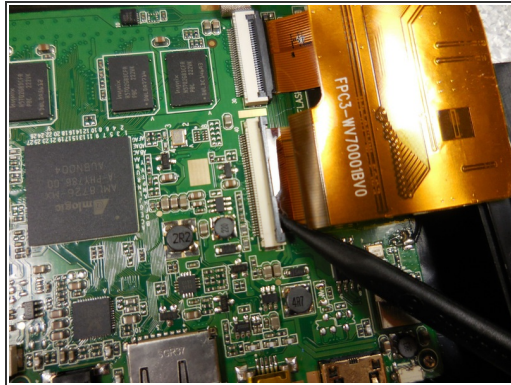



- Disconnect the two ribbon connectors by flipping the gray tabs up with a fingernail or a spudger.
- Remove the ribbon cables.

Step 6 — Screen




- Remove all 14 of the 3.6mm screws using a PH00 screwdriver.

Step 7

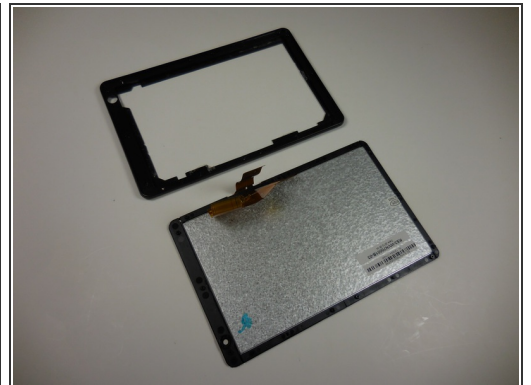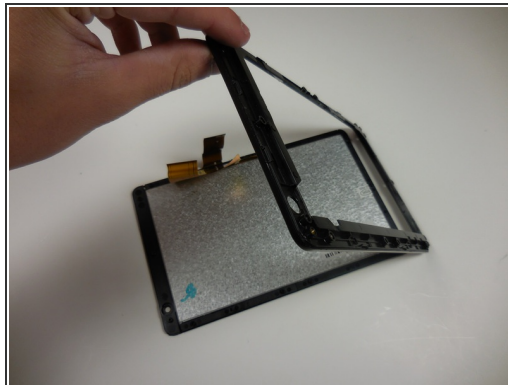

- Gently separate the screen from the plastic border/screen holder by pulling it off with your hands.

Step 8

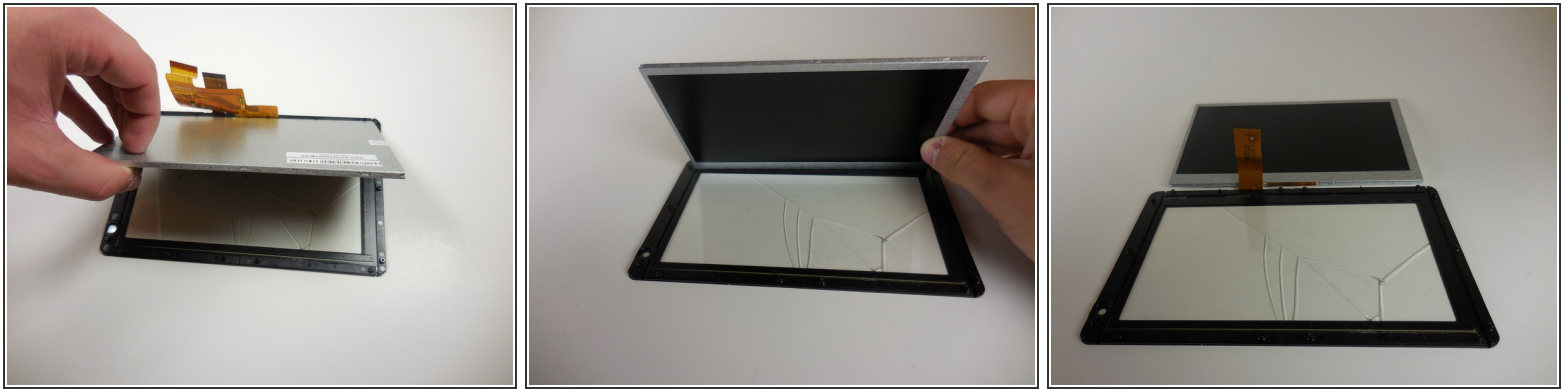

- Remove the grey monitor from the glass screen cover by gently lifting it up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 04:29:26 PM.